




# INSTALLATION INSTRUCTIONS



TOYOTA/LEXUS OVERLAND CAT-BACK | PART NO. 19544

## BILL OF MATERIALS:

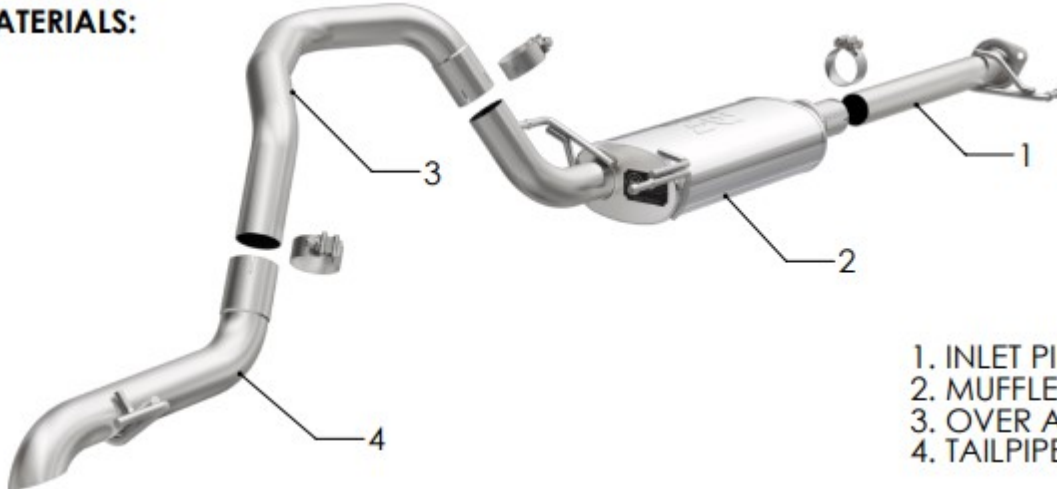

- 1. INLET PIPE ASSY.
- 2. MUFFLER ASSY.
- 3. OVER AXLE PIPE
- 4. TAILPIPE ASSY.



WEAR SAFETY GLASSES



READ INSTRUCTIONS THOROUGHLY BEFORE INSTALLING PRODUCT



SPRAY LUBRICANT

To ease removal of existing exhaust components (especially on older vehicles) spray penetrating lubricant on all fasteners and hangers/insulators that will be loosened or removed and let soak before disassembly.

## HARDWARE KIT:

- 1. [3] 2.50" Torca Clamp

## MINIMUM REQUIRED TOOLS:



13mm



Hanger Tool (Or Pry Bar)

## MAGNAFLOW RECOMMENDS PROFESSIONAL INSTALLATION ON ALL THEIR PRODUCTS



**WARNING:** When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.


**ATTENTION:** Always install any supplied band or U-bolt clamps to the proper torque specifications of 40-45 ft-lb for band clamps and 30-35 ft-lb for U-bolt clamps. Over tightening will result in the clamps breaking and will NOT be warranted by MagnaFlow.

MAGNAFLOW: 1901 Corporate Centre Dr - Oceanside, CA 92056 | 1(800)990-0905  
Technical Support: 1(800) 959-9226 | Email: [moreinfo@magnaflow.com](mailto:moreinfo@magnaflow.com)

## INSTALLATION INSTRUCTIONS




**Step 1:** To remove the OEM exhaust system, loosen hardware at the muffler flange.

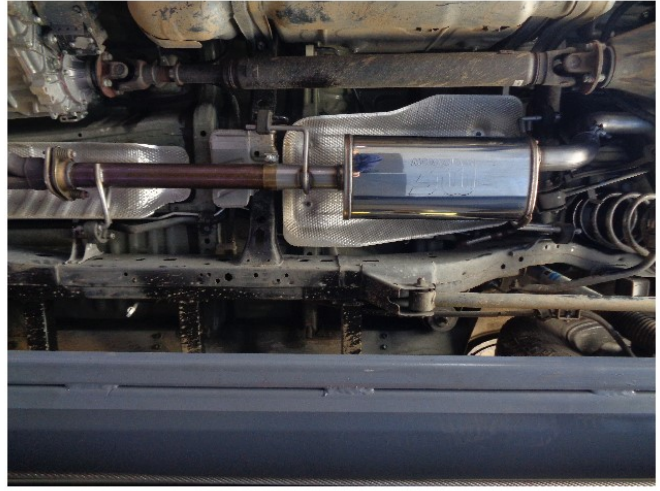

**Step 3:** Install the new system by attaching inlet pipe and muffler assembly with the supplied hardware.



**Step 2:** Working front to rear disengage all welded hangers from the rubber insulators and remove the system. (Retain the insulators as they will be needed to mount the new MAGNAFLOW system.)

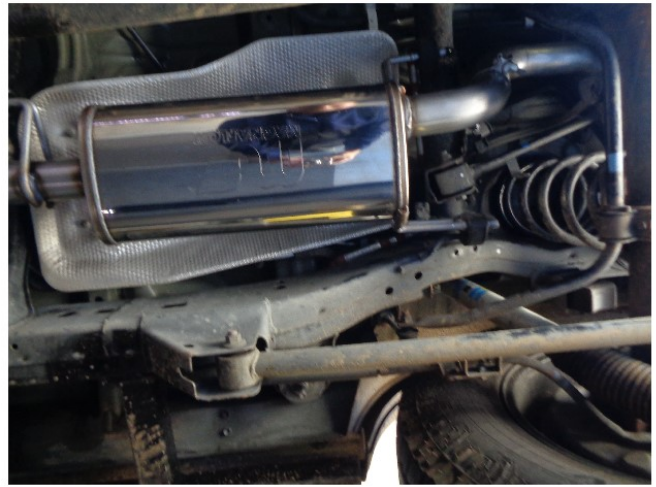

**Step 4:** Locate the welded hangers to the rubber insulators. Leave all clamps loose for final adjustment of the complete system once installed.

## INSTALLATION INSTRUCTIONS



**Step 5:** Next, attach the Overaxle pipe to the muffler Assembly and loosely tighten.



**Step 6:** Using the OE rubber insulators install the tailpipe assemblies to the Over Axle Pipe fitting the hangers into the installed hanger brackets.



**Step 7:** Once a final position has been chosen for the new exhaust system, evenly tighten all clamps from front to rear using the torque specifications on page one of the instructions. Inspect all fasteners after 25-50 miles of operation and re-tighten if necessary.